

Neatfold™

"The Original Bed Sheet & Spread Folder"

Neatfold.com


PATENTED
MADE IN U.S.A.

INSTALLATION *Instructions*

- 1 Use provided double-sided super tape for a quick and convenient installation. **Neatfold should be placed in an area large enough to accommodate a bed sheet stretched to length.**
- 2 Remove adhesive lining from each side of tape and apply one tab to each of the 4 flat surfaces on backside of Neatfold. Then stick Neatfold evenly onto a clean, dry and vertical surface approximately 5 feet from the floor. Then cover screw holes with the provided white caps.

 **NOTE:** The provided tape is **permanent**. Please measure properly before placement.

INSTANT

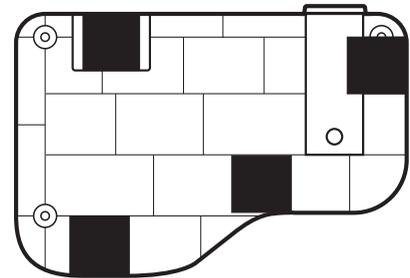

**Supplies
Needed:**




WOOD SURFACES

- 1 Hold Neatfold level to the wall approximately 5' from the floor. Mark a location of each of the three holes with a pencil.
- 2 Drill a 1/8" size hole for each mark.
- 3 Again, hold Neatfold to the wall, insert the provided screws into their respective holes and then secure using a standard Phillips-head screwdriver.
- 4 Cover screw holes with provided white caps.

DRYWALL OR PLASTER SURFACES*

- 1 Hold Neatfold level to the wall approximately 5' from the floor. Mark a location of each of the three holes with a pencil.
- 2 Drill a 3/16" size hole for each mark.
- 3 Gently tap the provided anchors into their respective holes using a hammer.
- 4 Again, hold Neatfold to the wall, insert the provided screws into their respective holes and then secure using a standard Phillips-head screwdriver.
- 5 Cover screw holes with provided white caps.

EZ TOOL METHOD

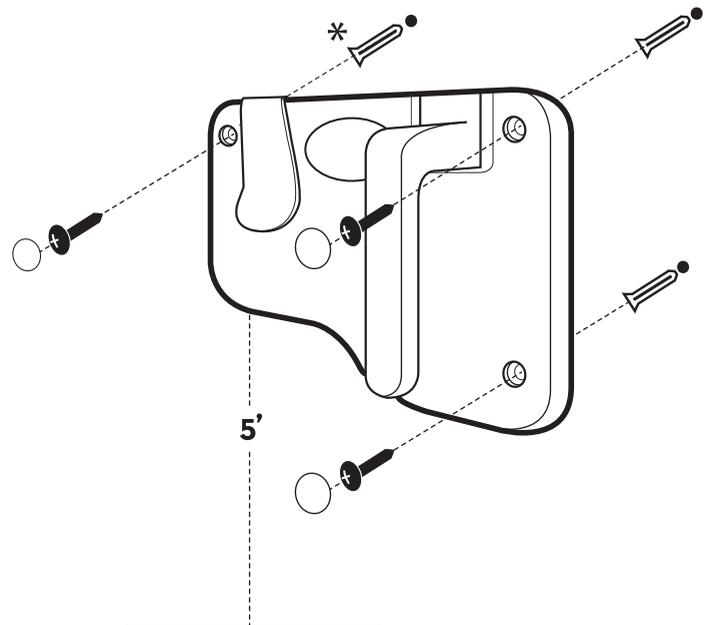

Questions? Comments? Concerns?
Write us at help@neatfold.com


Neatfold™
"The Original Bed Sheet & Spread Folder"
Neatfold.com

PATENTED
MADE IN U.S.A.




FOLDING *Instructions*

FLAT SHEETS & SPREADS

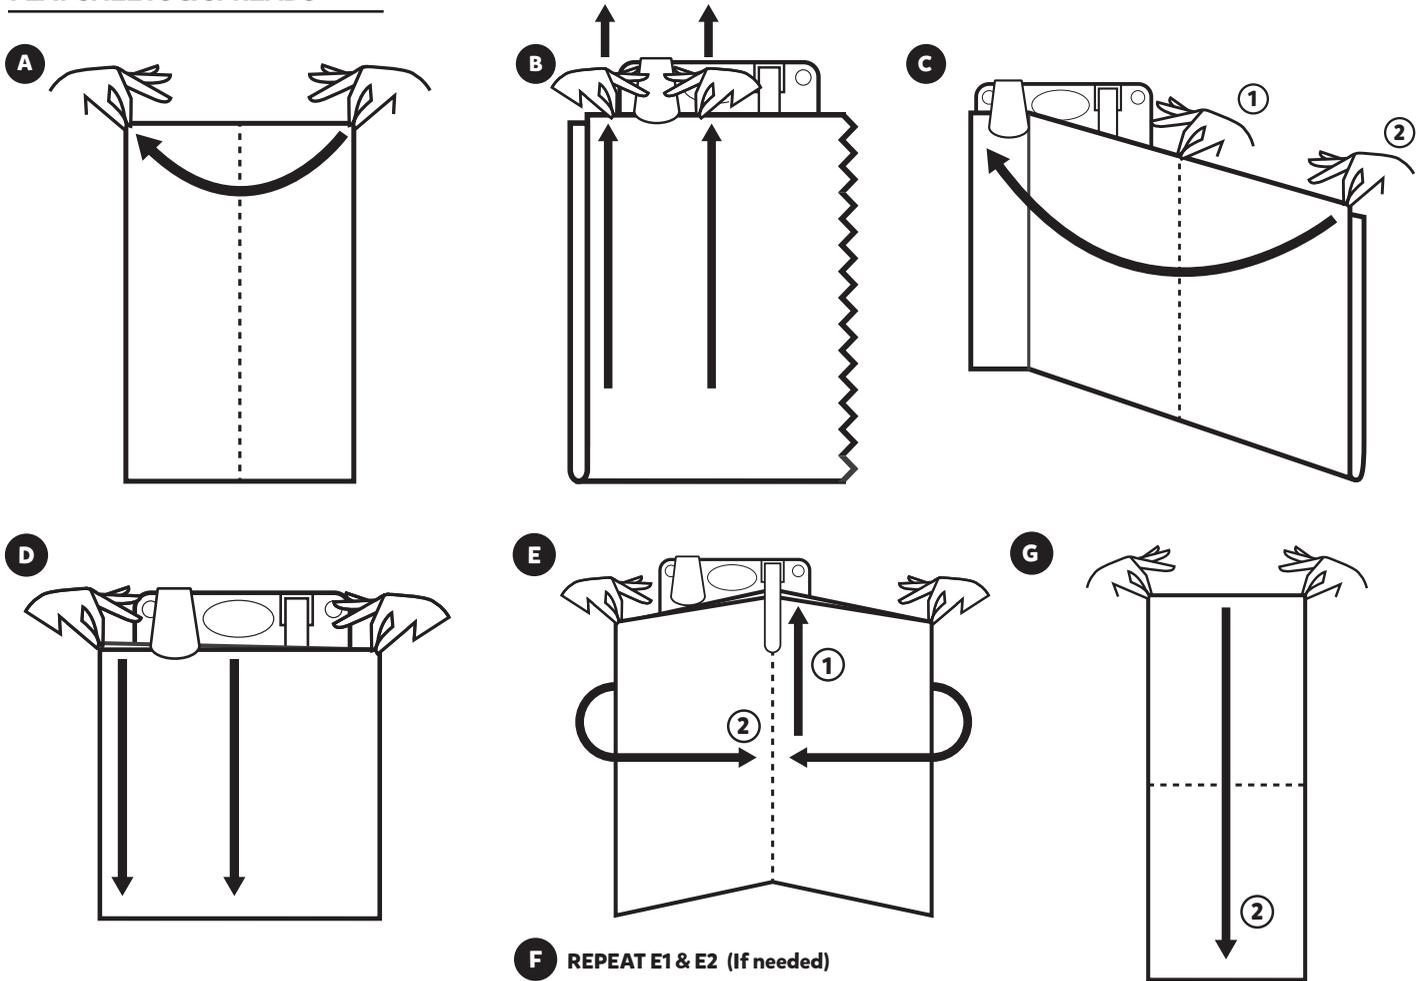

FITTED SHEETS - Option 1

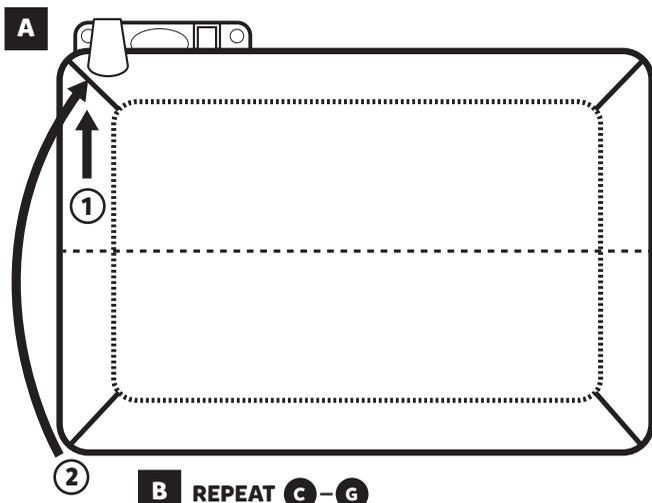

OR lay partially folded sheet on a flat surface after **D** and complete fold on your own.

Scan the code with your Apple or Android device for Video Instructions


Video Instructions are always available at www.Neatfold.com




Questions? Comments? Concerns?
Write us at help@neatfold.com




FITTED SHEETS - Option 2

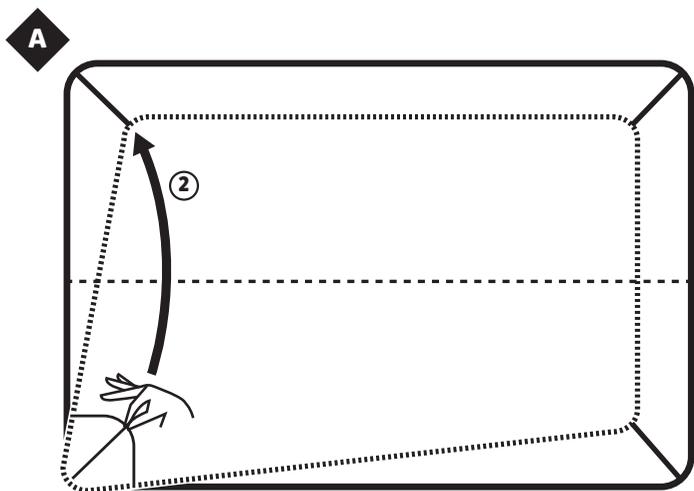


① Grab inside bottom left corner and tuck into top left corner using your pointer finger

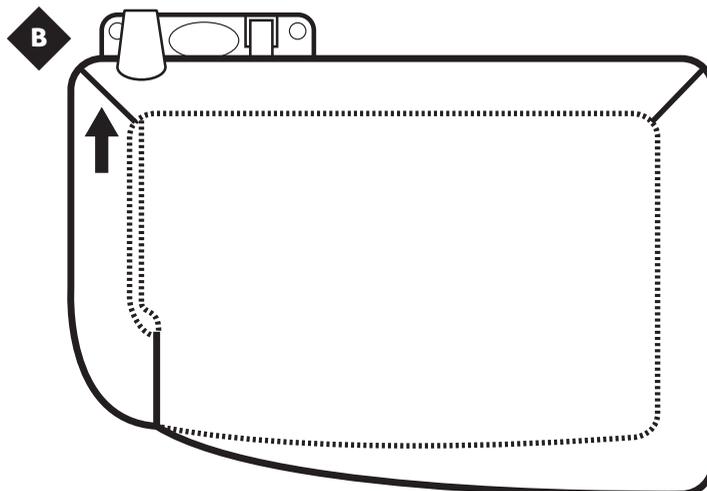

① Place left corners into the Neatfold clip

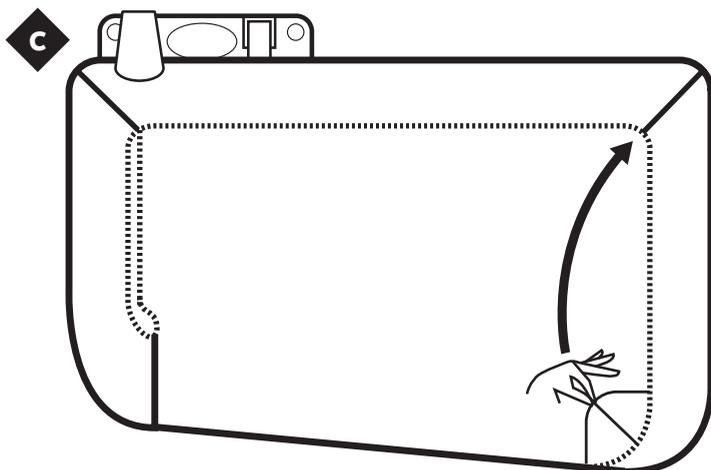

① Grab inside bottom right corner and tuck inside top right corner

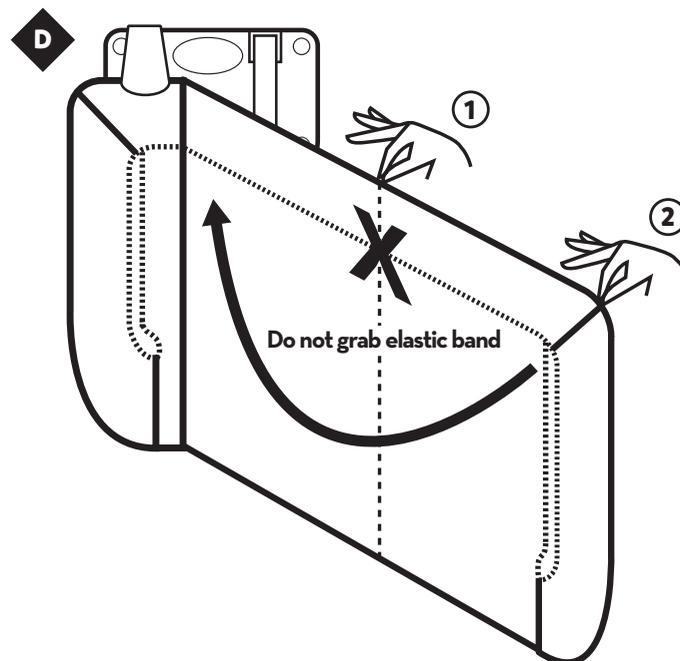

Scan the code with your Apple or Android device for Video Instructions

Video Instructions are always available at www.Neatfold.com



E REPEAT C - G (See Page 2)

OR lay partially folded sheet on a flat surface after **D** and complete fold on your own.

Questions? Comments? Concerns?
Write us at help@neatfold.com

Neatfold
"The Original Bed Sheet & Spread Folder"
Neatfold.com

PATENTED
MADE IN U.S.A.