


### INSTALLATION Instructions

- Use provided double-sided super tape for a quick and convenient installation. Neatfold should be placed in an area large enough to accommodate a bed sheet stretched to length.
- 2 Remove adhesive lining from each side of tape and apply one tab to each of the 4 flat surfaces on backside of Neatfold. Then stick Neatfold evenly onto a clean, dry and vertical surface approximately 5 feet from the floor. Then cover screw holes with the provided white caps.

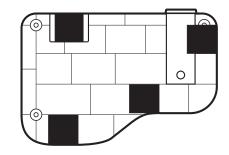

**INSTANT** 



NOTE: The provided tape is permanent. Please measure properly before placement.




### **WOOD SURFACES**

- Hold Neatfold level to the wall approximately 5' from the floor. Mark a location of each of the three holes with a pencil.
- Drill a 1/8" size hole for each mark.
- 3 Again, hold Neatfold to the wall, insert the provided screws into their respective holes and then secure using a standard Phillips-head screwdriver.
- 4 Cover screw holes with provided white caps.

### **DRYWALL OR PLASTER SURFACES\***

- 1 Hold Neatfold level to the wall approximately 5' from the floor. Mark a location of each of the three holes with a pencil.
- 2 Drill a 3/16" size hole for each mark.
- 3 Gently tap the provided anchors into their respective holes using a hammer.
- 4 Again, hold Neatfold to the wall, insert the provided screws into their respective holes and then secure using a standard Phillips-head screwdriver.
- 5 Cover screw holes with provided white caps.

## **EZ TOOL METHOD**

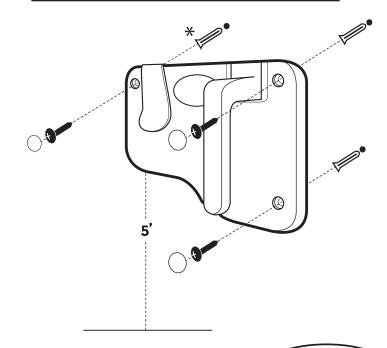


Questions? Comments? Concerns? Write us at help@neatfold.com


Neatfold IM "The Original Bed Sheet & Spread Folder Neatfold.com PATENTED MADE IN U.S.A.





# FOLDING Instructions


### **FLAT SHEETS & SPREADS**

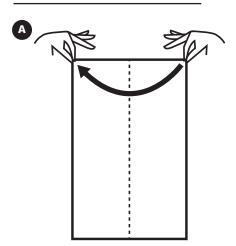


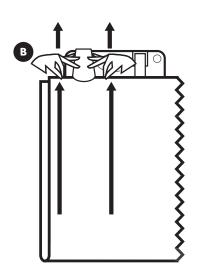

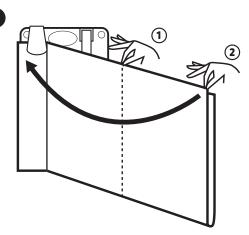


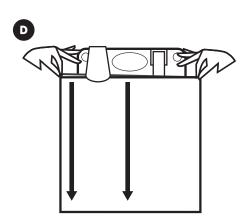

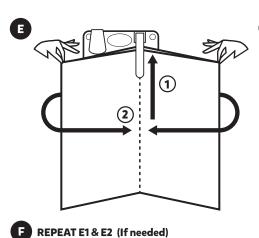

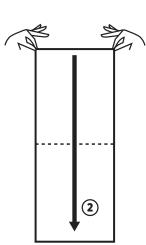

#### FITTED SHEETS - Option 1

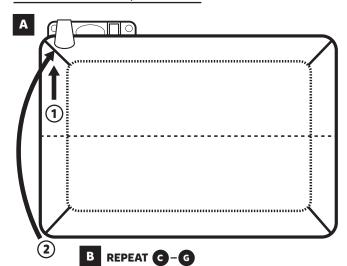

Scan the code with your Apple or Android device for Video Instructions

> Video Instructions are always available at www.Neatfold.com




Questions? Comments? Concerns? Write us at help@neatfold.com Neatfold
"The Original Bed Sheet & Spread Folder" Neatfold.com PATTENTIED

MADE IN U.S.A.


**OR** lay partially folded shet on a flat surface after **D** and complete fold on your own.




### FITTED SHEETS - Option 2

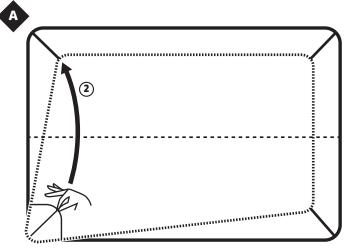


(1) Grab inside bottom left corner and tuck into top left corner using your pointer finger

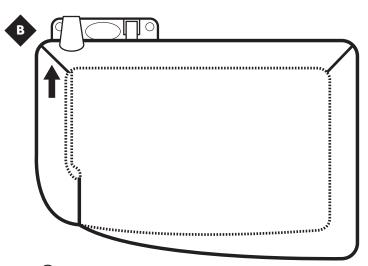

1 Place left corners into the Neatfold clip

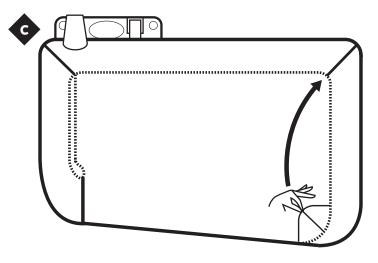

1 Grab inside bottom right corner and tuck inside top right cornert

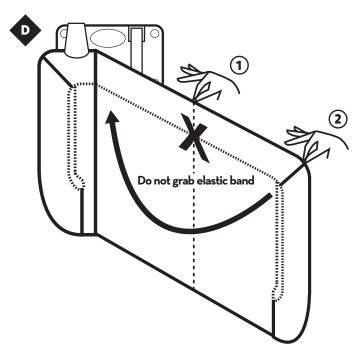

Scan the code with your Apple or Android device for Video Instructions

Video Instructions are always available at **www.Neatfold.com** 



E REPEAT G-G (See Page 2)

**OR** lay partially folded shet on a flat surface after **D** and complete fold on your own.

Questions? Comments? Concerns? Write us at help@neatfold.com

"The Original Bed Sheet & Spread Folder"
Neatfold.com
PATENTED
MADE IN U.S.A.